


Title: Code Handset to Receiver GTX U3



The receiver features 4 separate channels which allows four separate handsets (transmitters) to operate


1. Remove Cover

- Open Control box by removing screw and carefully remove by tilting cover from bottom

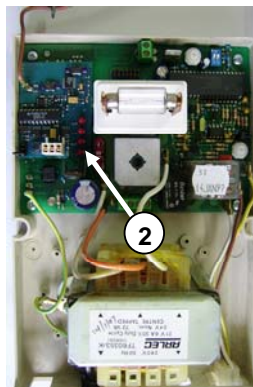


2. Locate receiver board

- Receiver board is located in the upper left region of the main circuit board
- The receiver is identified by the brown antenna wire attached

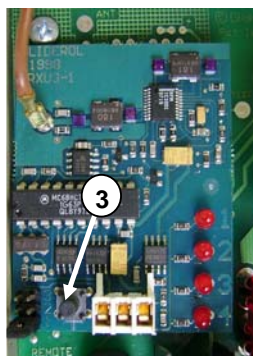

3. Press Learn Button

- Red LED #1 will illuminate representing channel 1.
- To select an alternate channel press Learn button until desired LED is illuminated (ie: press twice for channel 2; press four times for channel 4).

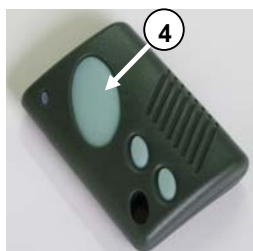

4. Press the large button on the handset

- All four LED's on receiver will flash to confirm that the handset has been successfully programmed.
- Carefully replace cover and affix with screw.
- Always use the large button to program remote, even if the door is configured to operate using one of the smaller buttons

Note: Additional remotes must be programmed to separate channels