



4DS2

Coding Instructions 4DS2 v1



WWS01

TO CODE NEW REMOTES YOU NEED TO DO THE FOLLOWING:

- 0 Open motor cover (lid).
- 1 Press Code button once.
Red dot in the corner of the display will light up
- 2 Press button on remote.
Red dot in the corner of the display will turn off
- 3 Press remote again.
Red dot and Motor LED lights will flash
- 4 Test remote

DELETE CODING

- 1 Press and hold CODE button until **C** is indicated on the display. All stored remotes are deleted.

