



3091977 RE / (Stand 07.2015) Druck 07.2015

EN




Fitting instructions





Sectional door type SPU F42 Parcel Walk / Parcel










A












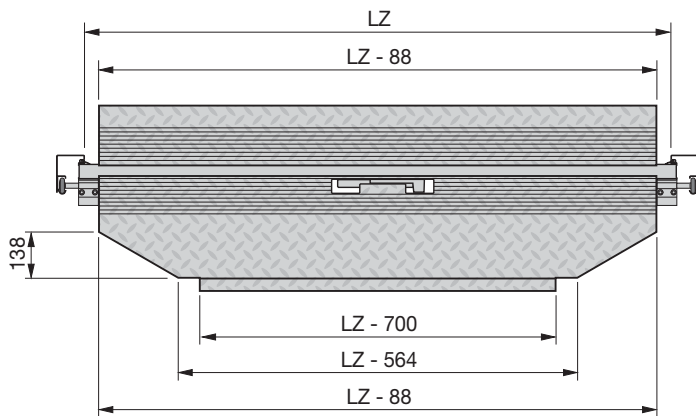
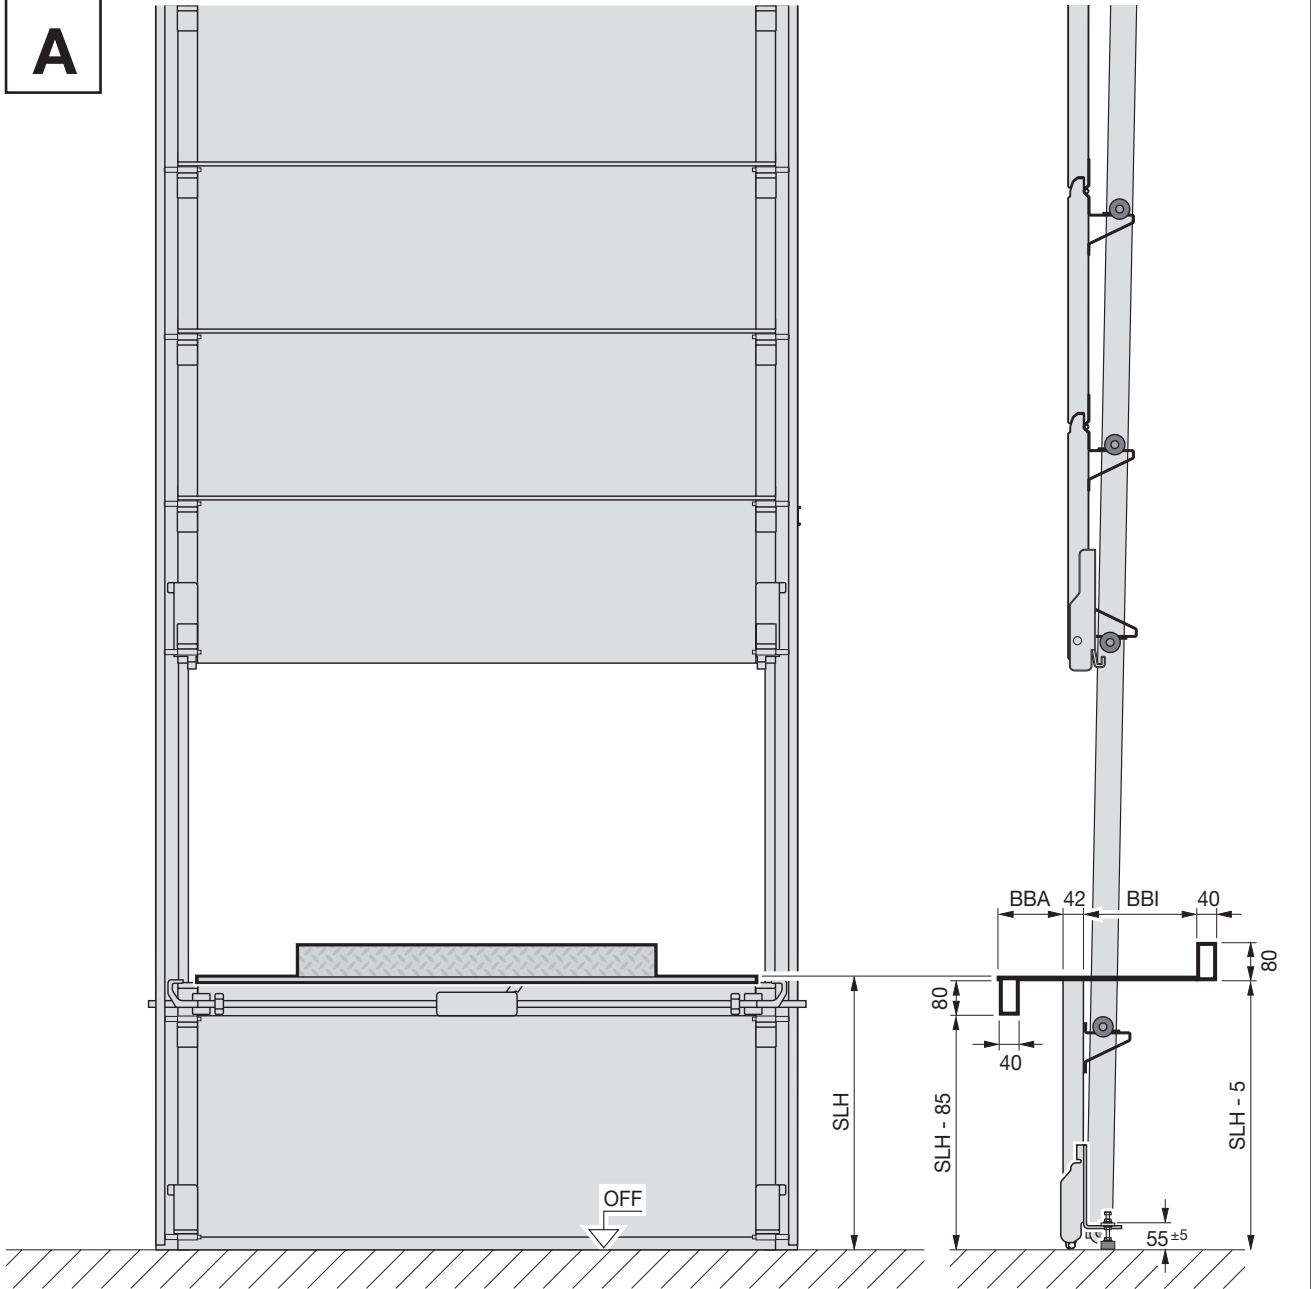


B

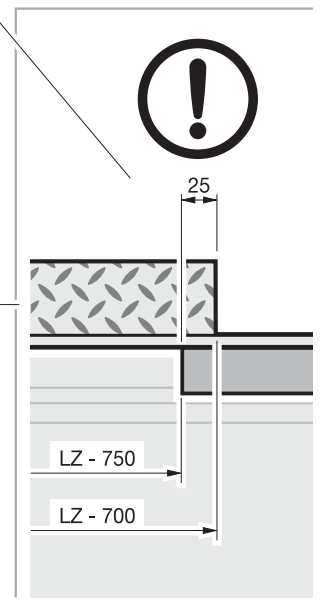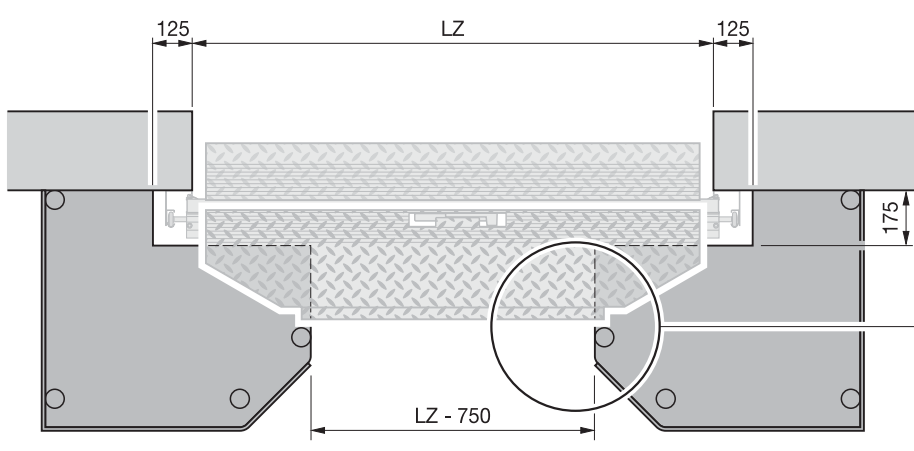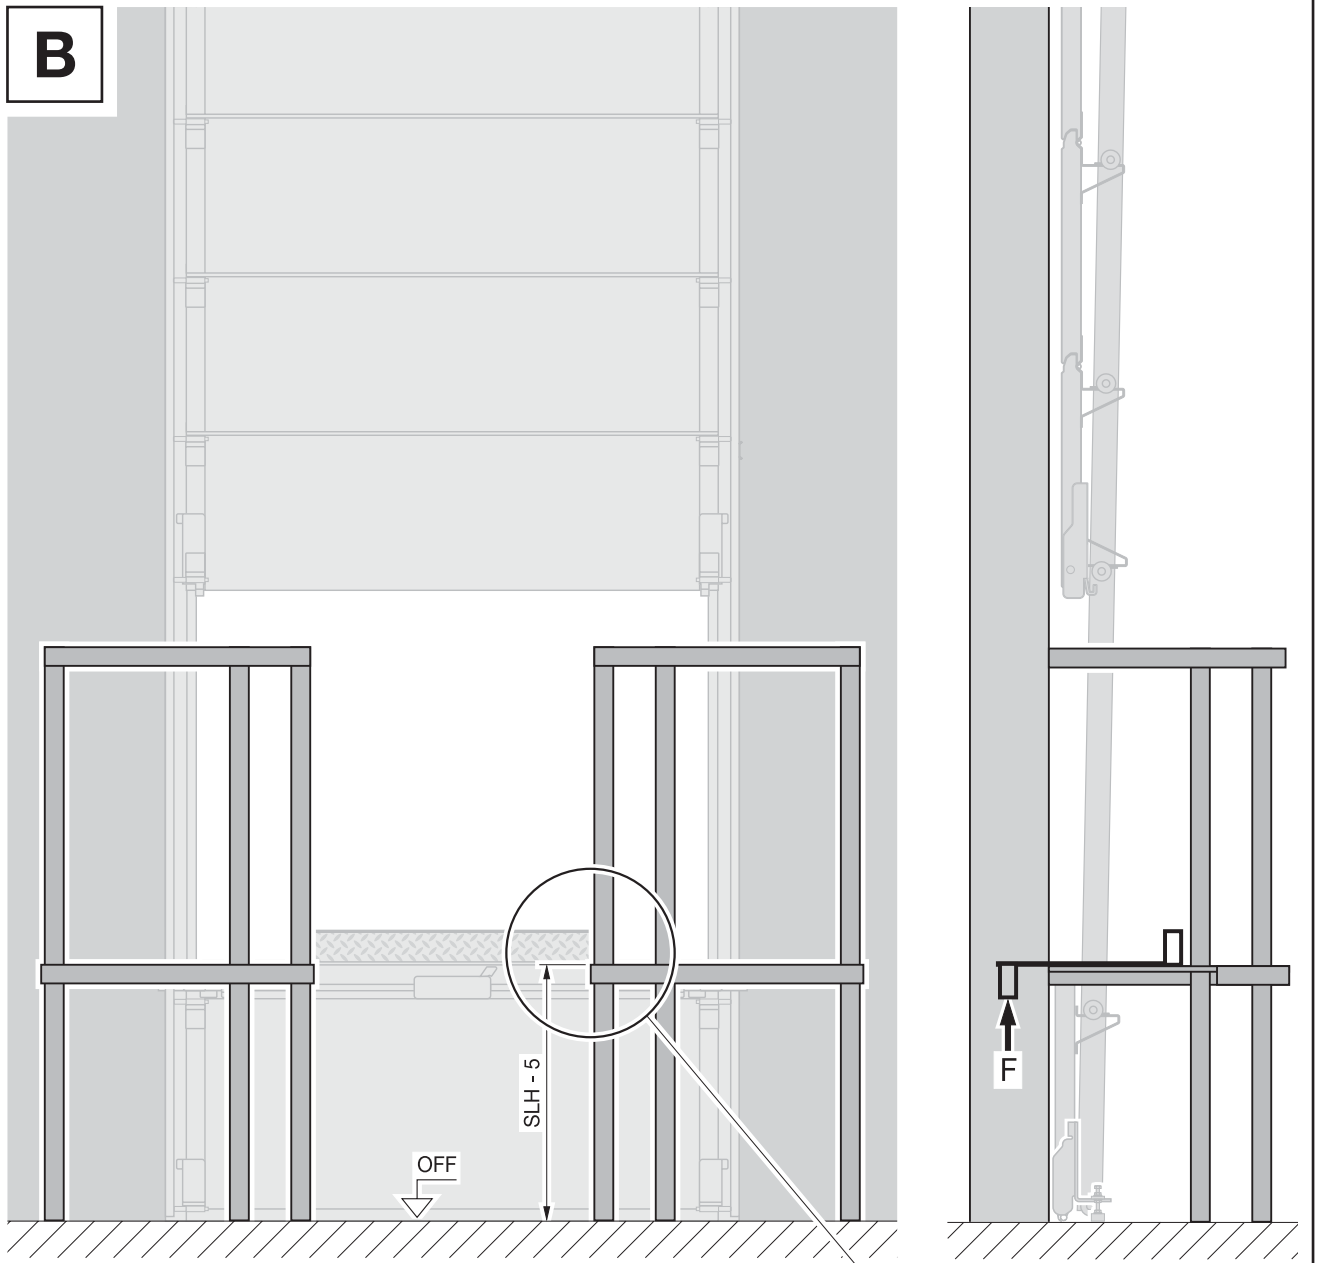

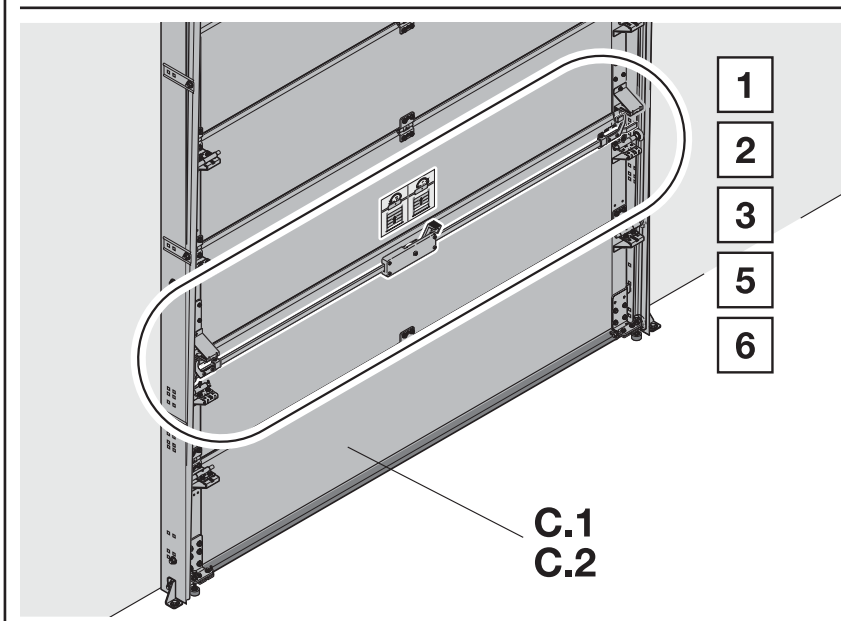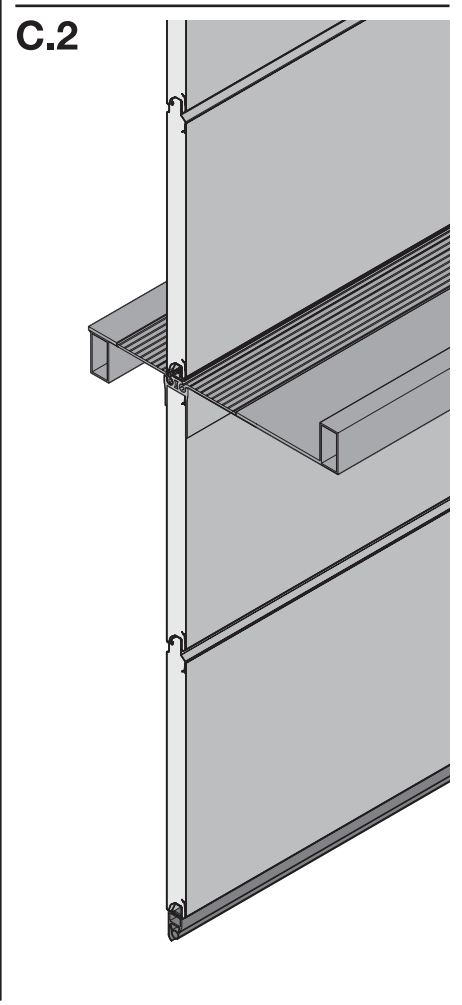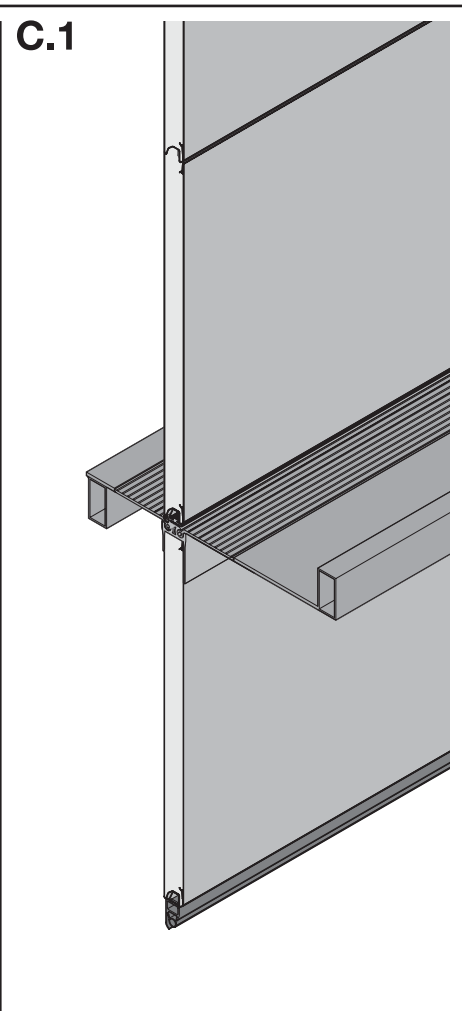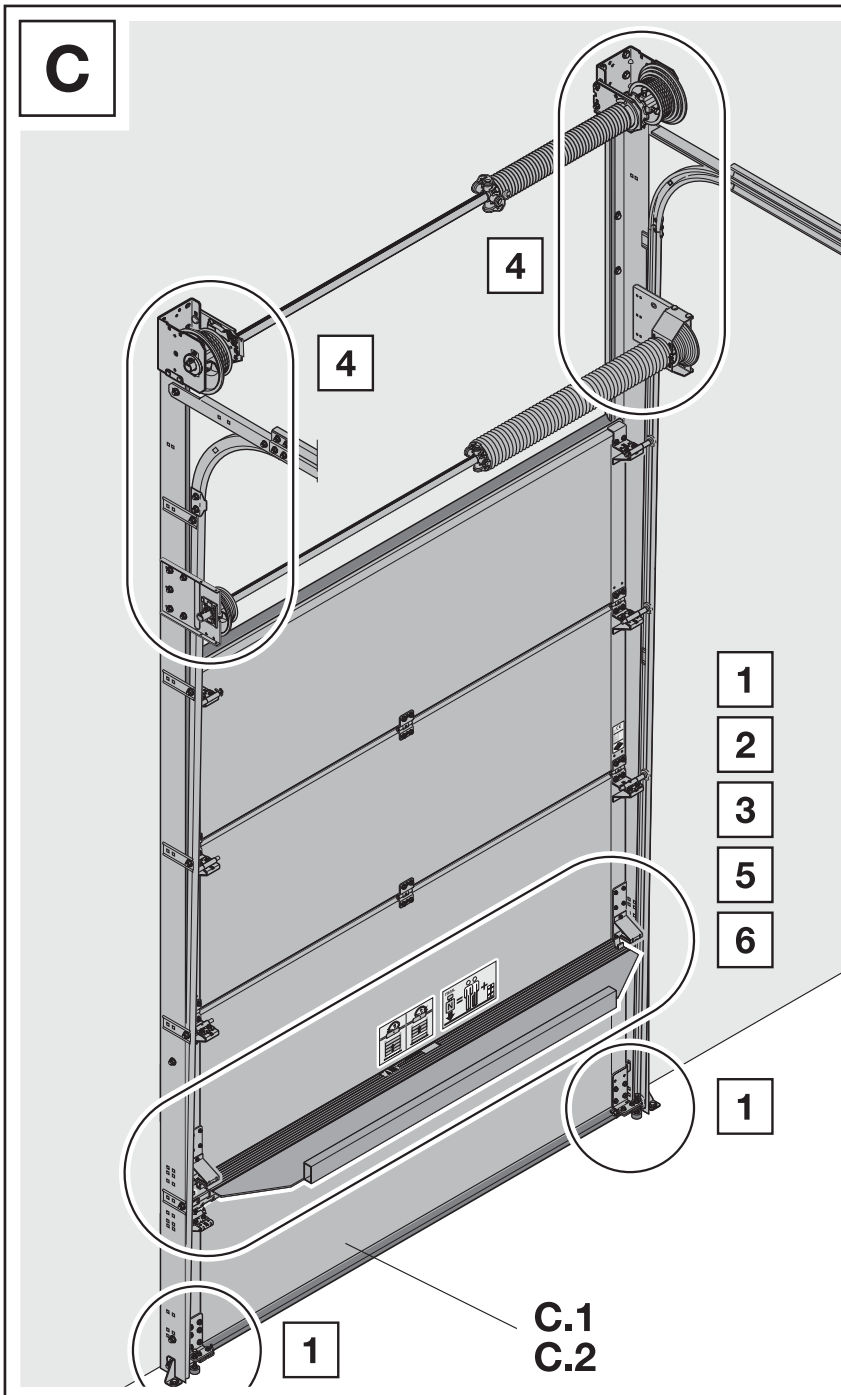


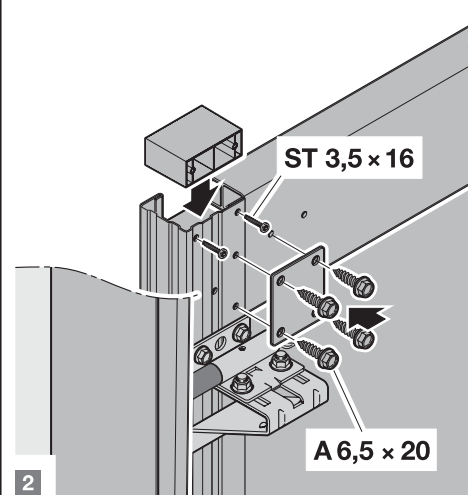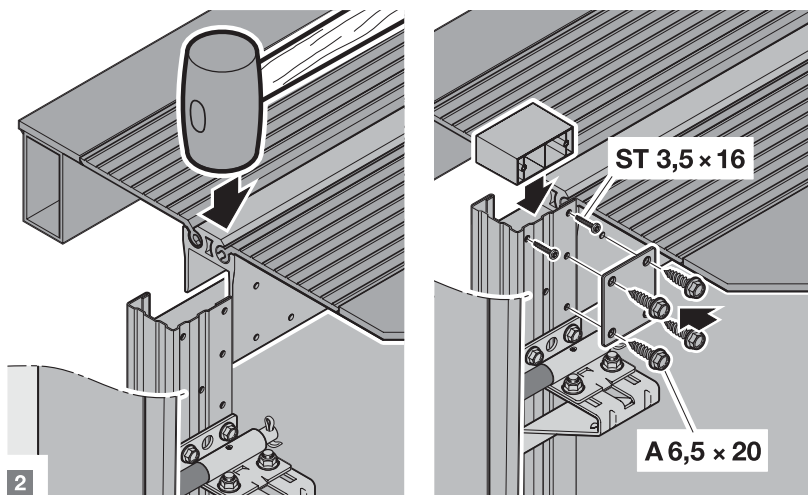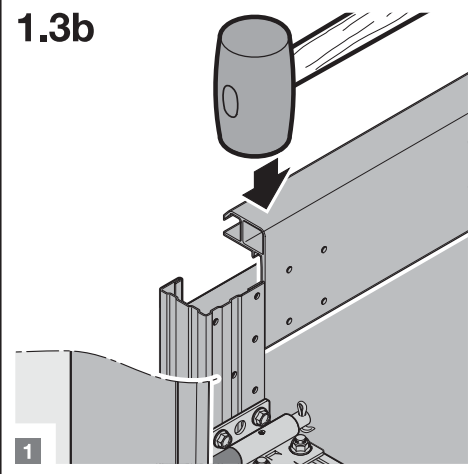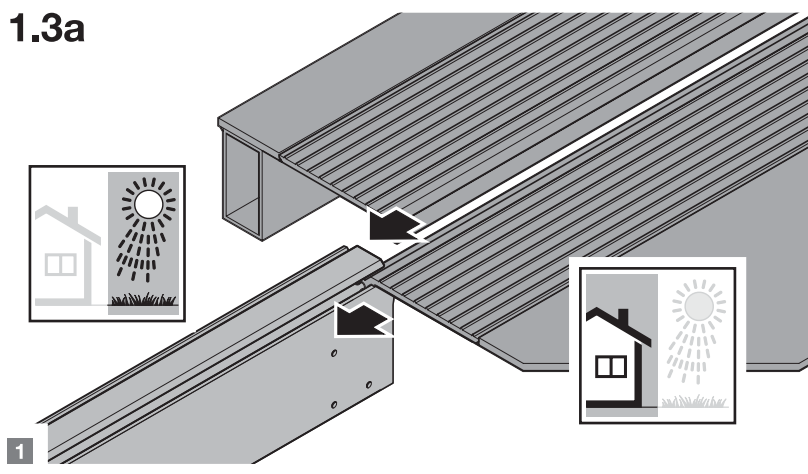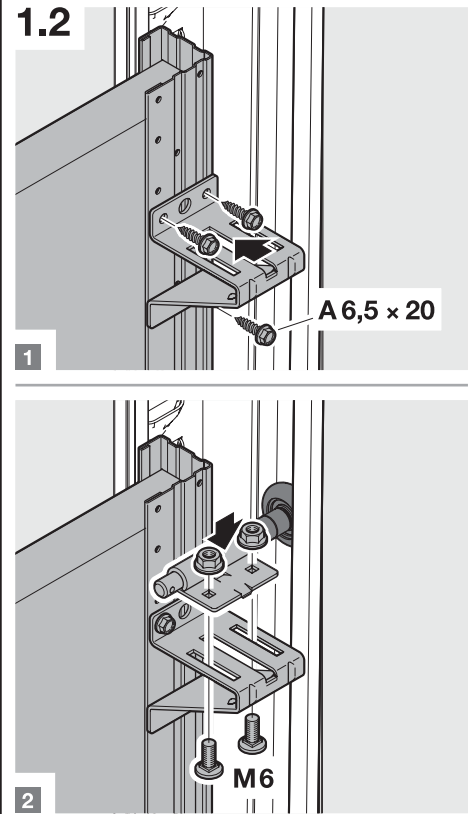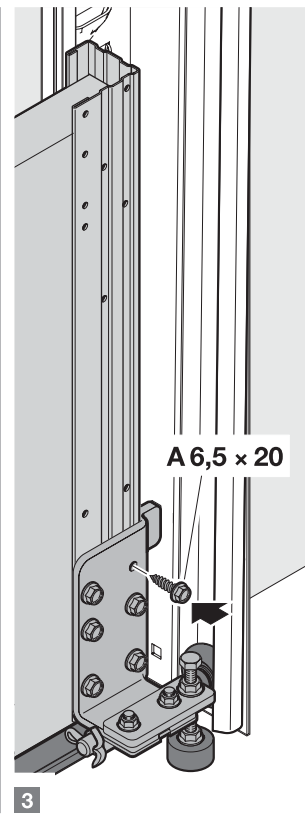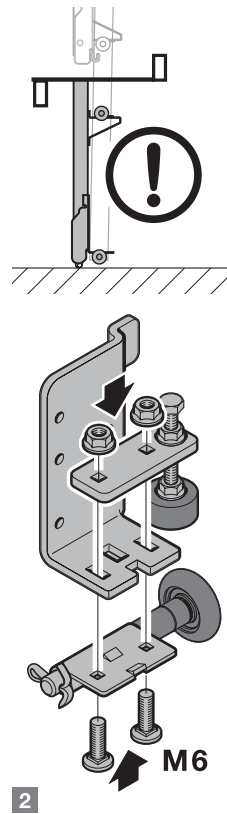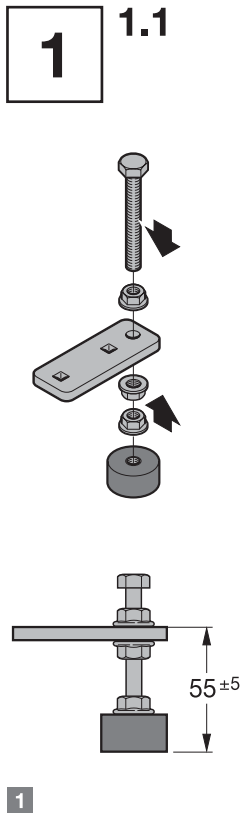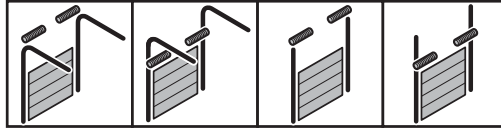

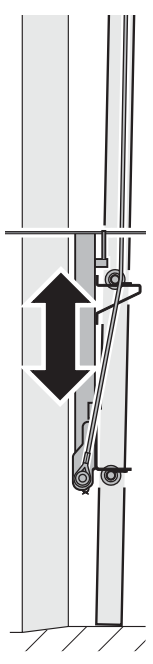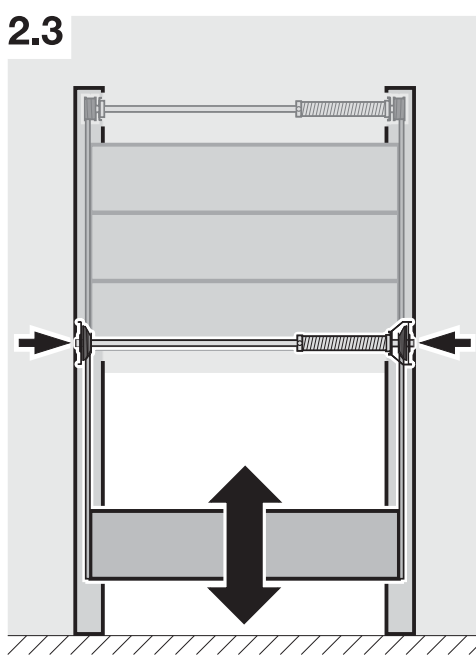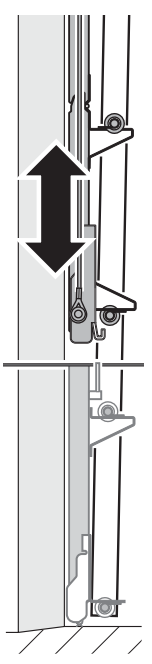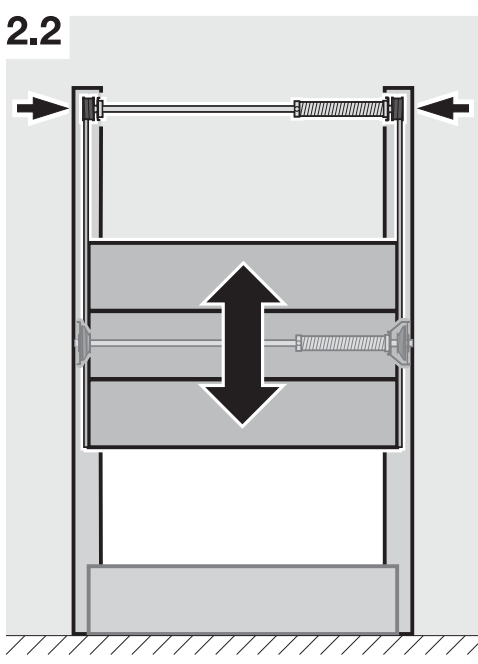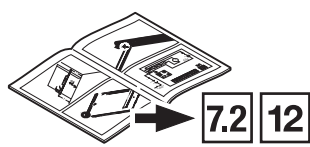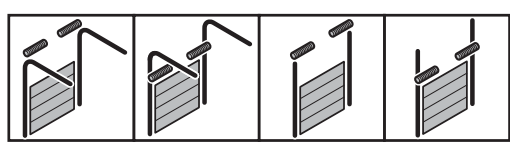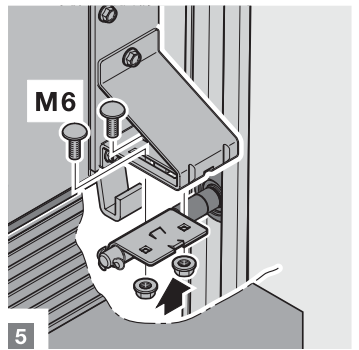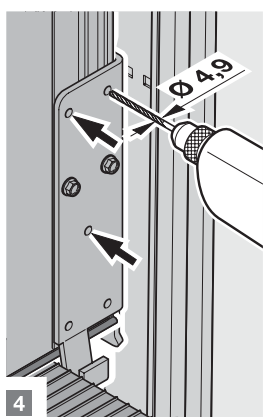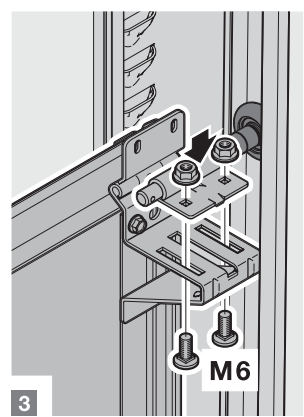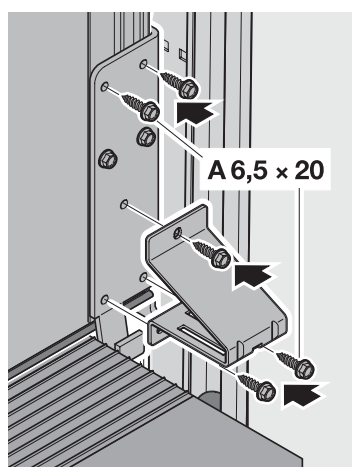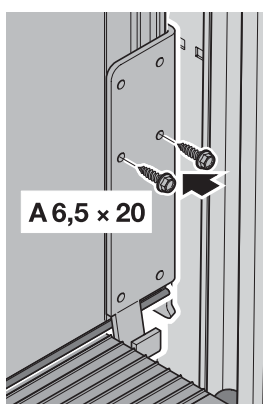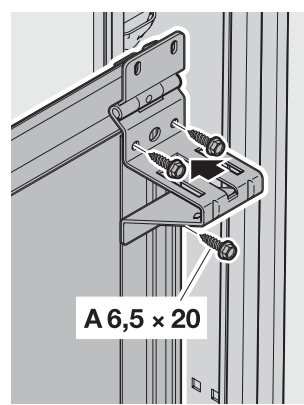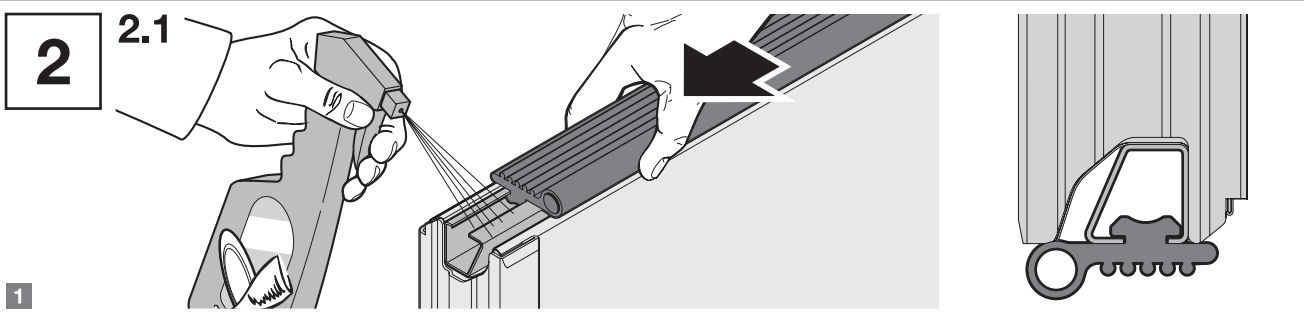


3

3.1

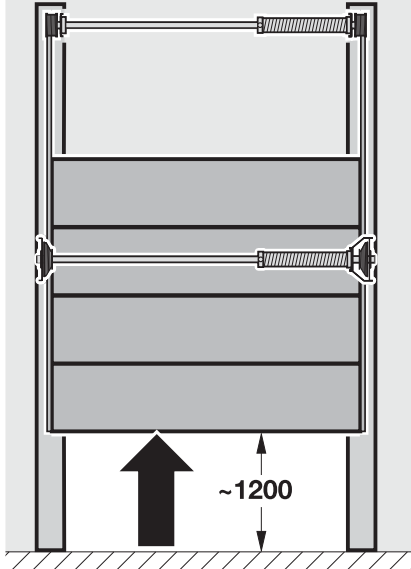

1

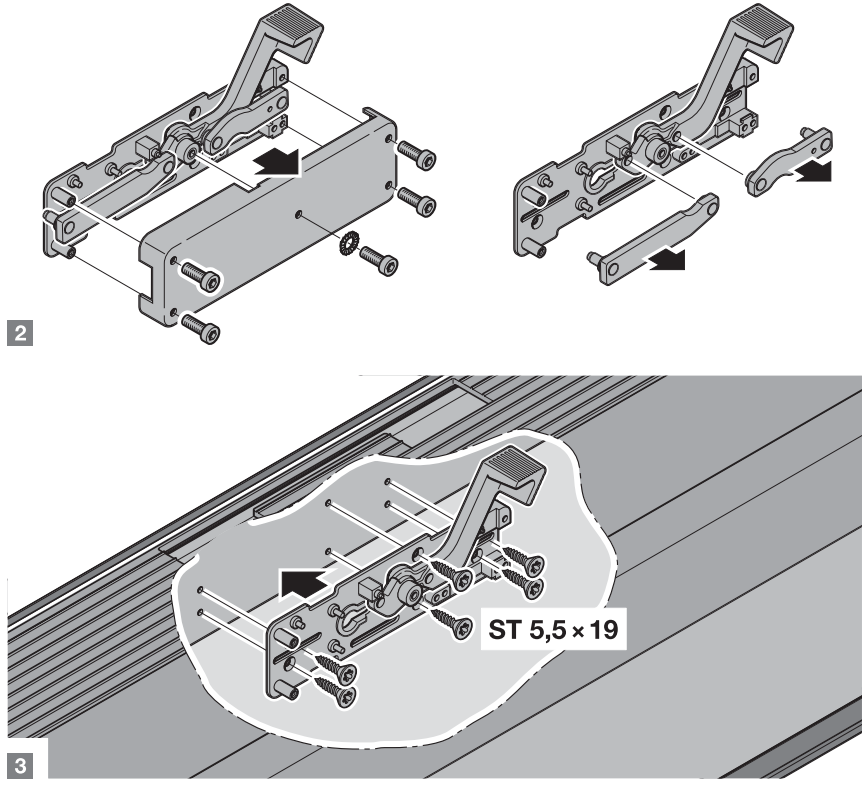


2

3


ST 5,5 x 19

3.2

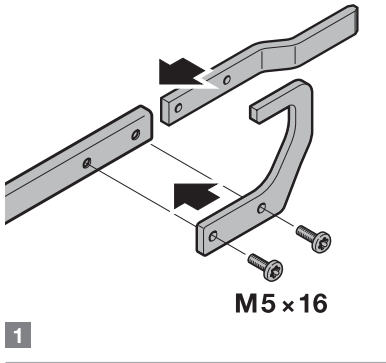



1

M5 x 16

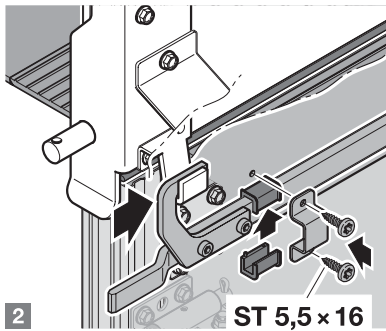


2

ST 5,5 x 16

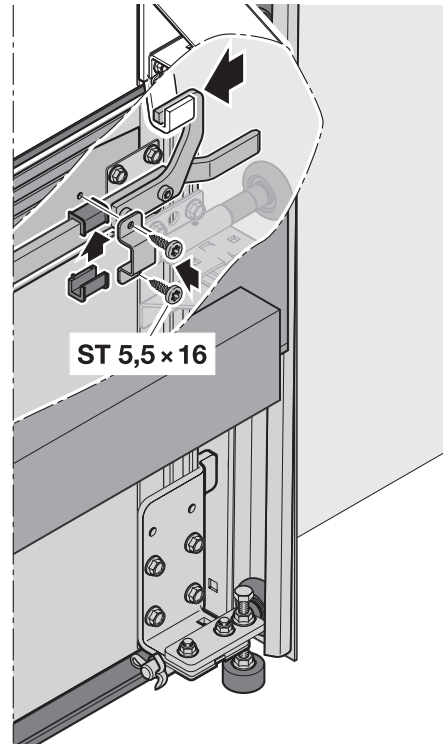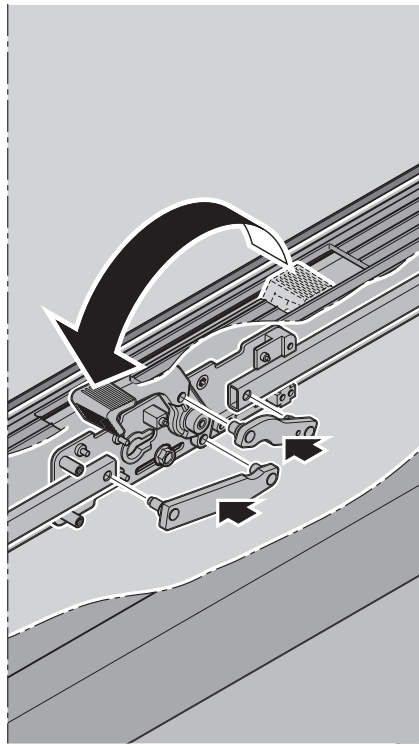


ST 5,5 x 16


3.3




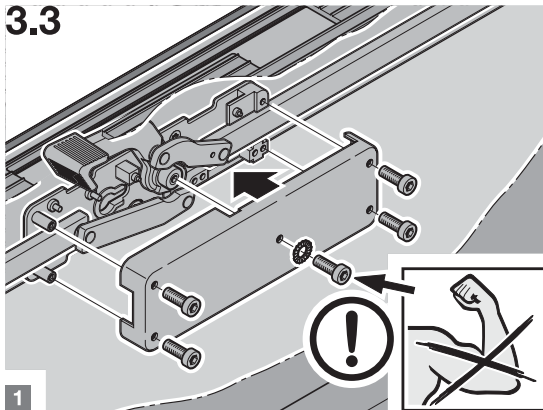


1




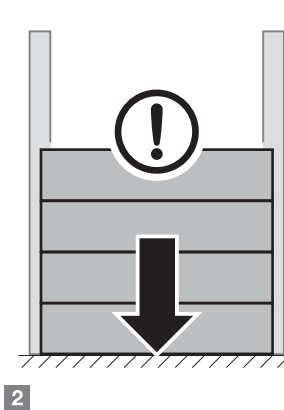


2





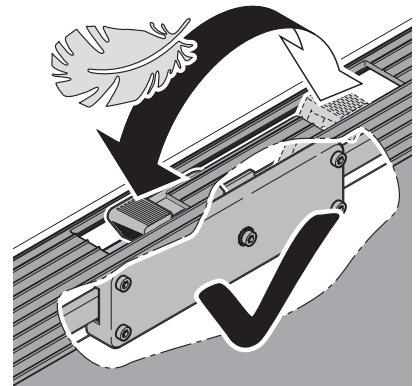


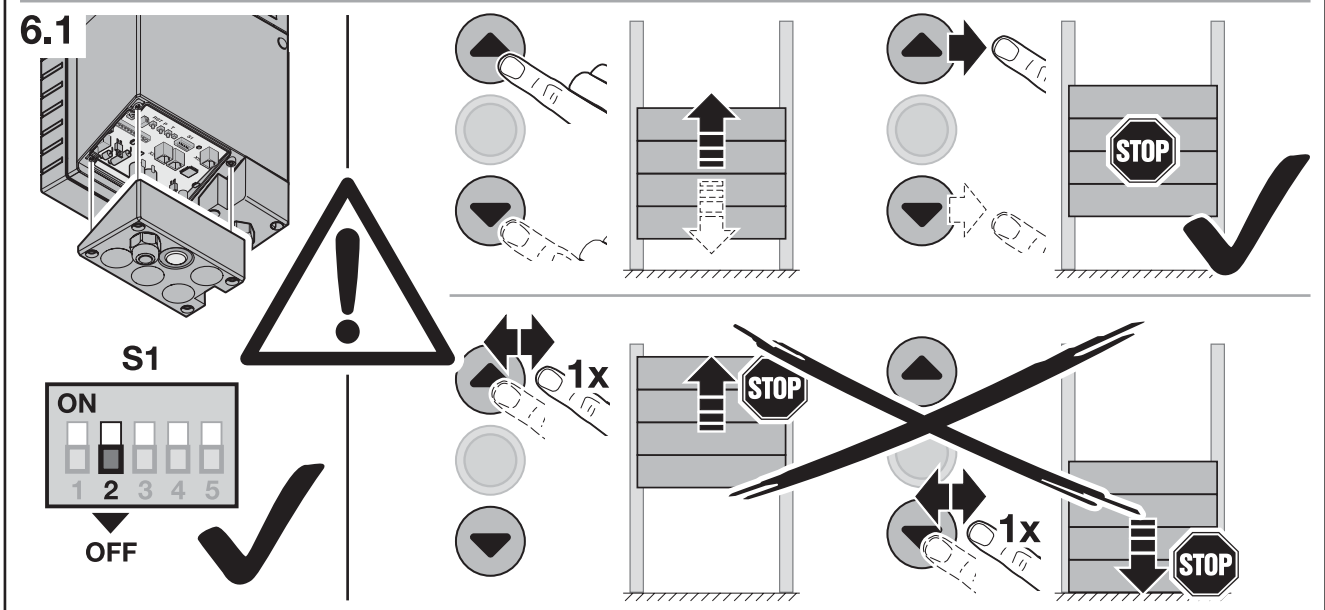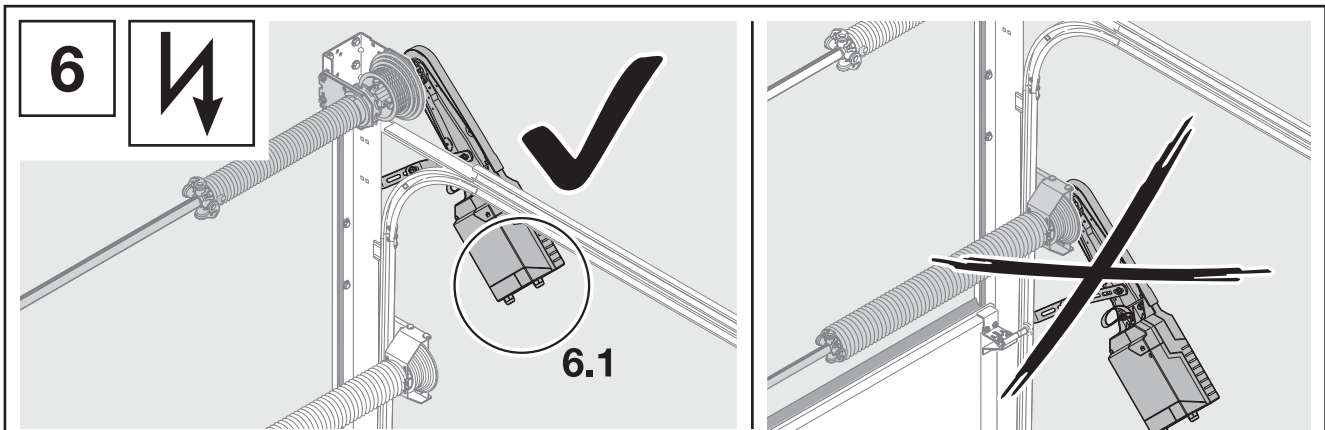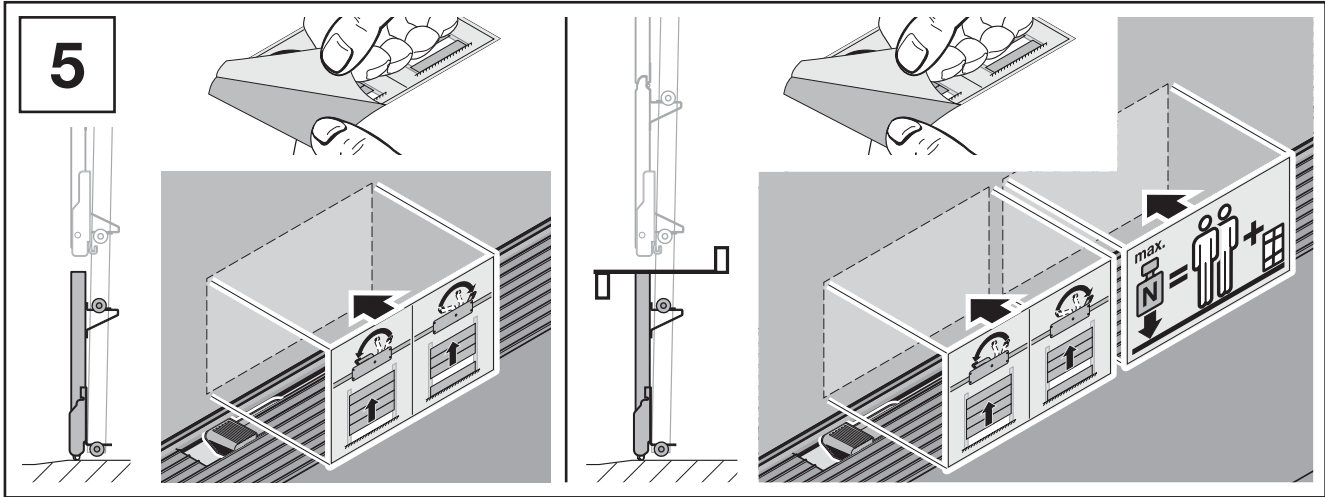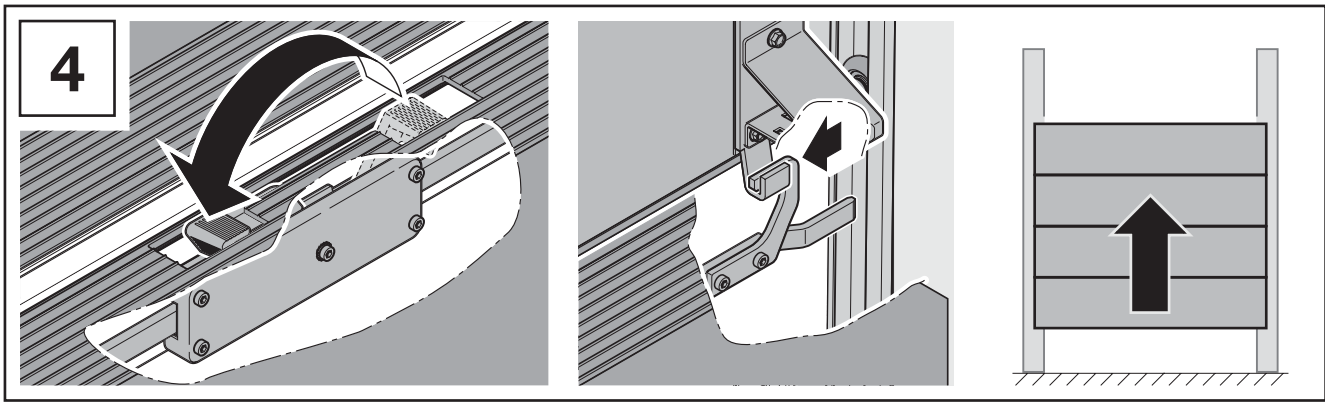

7

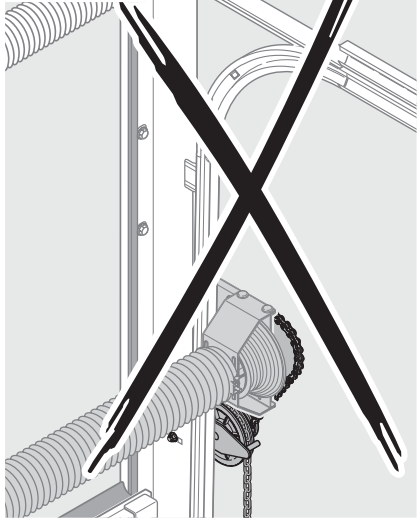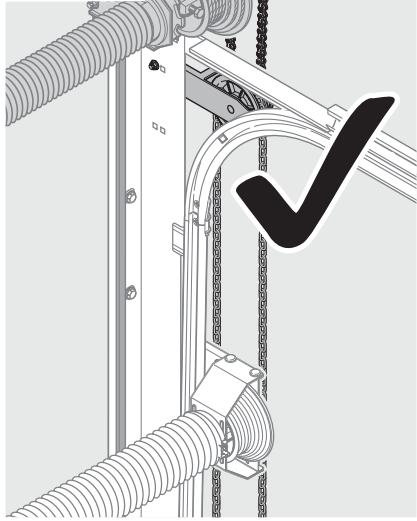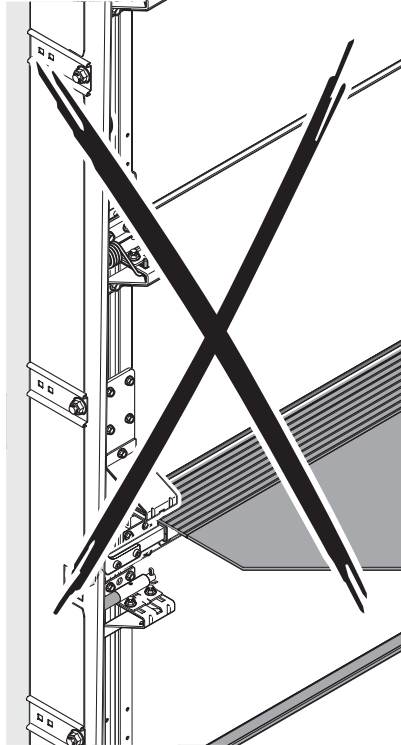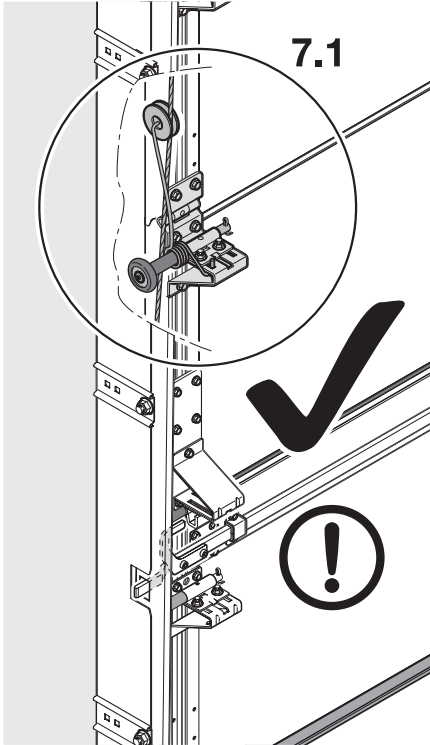


7.1

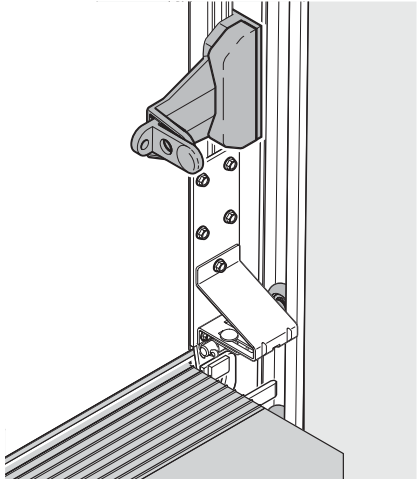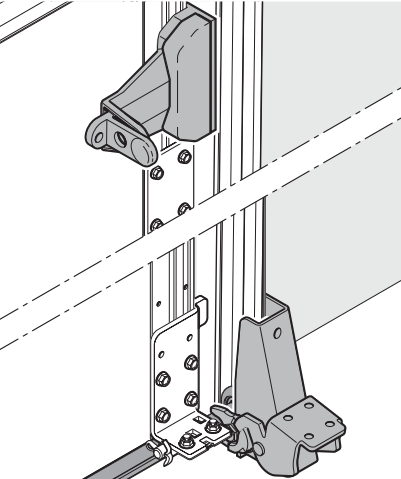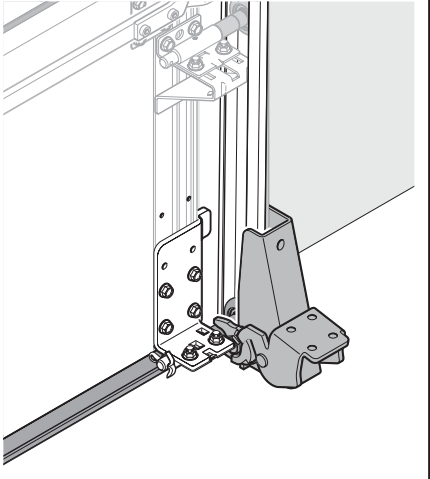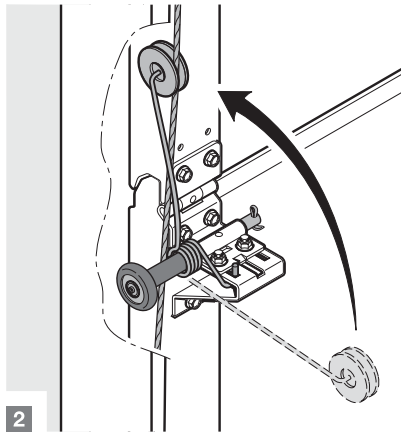
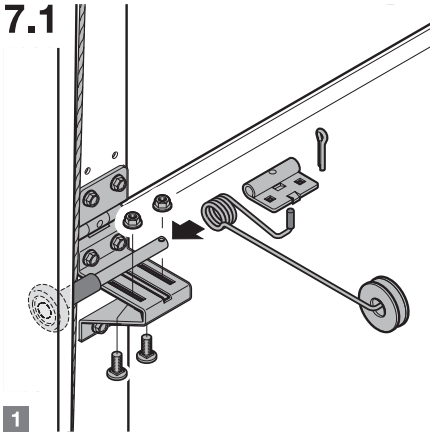


8

8.1

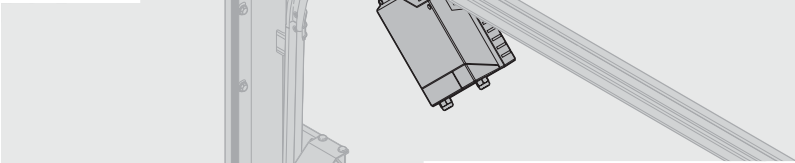

8.1
8.2

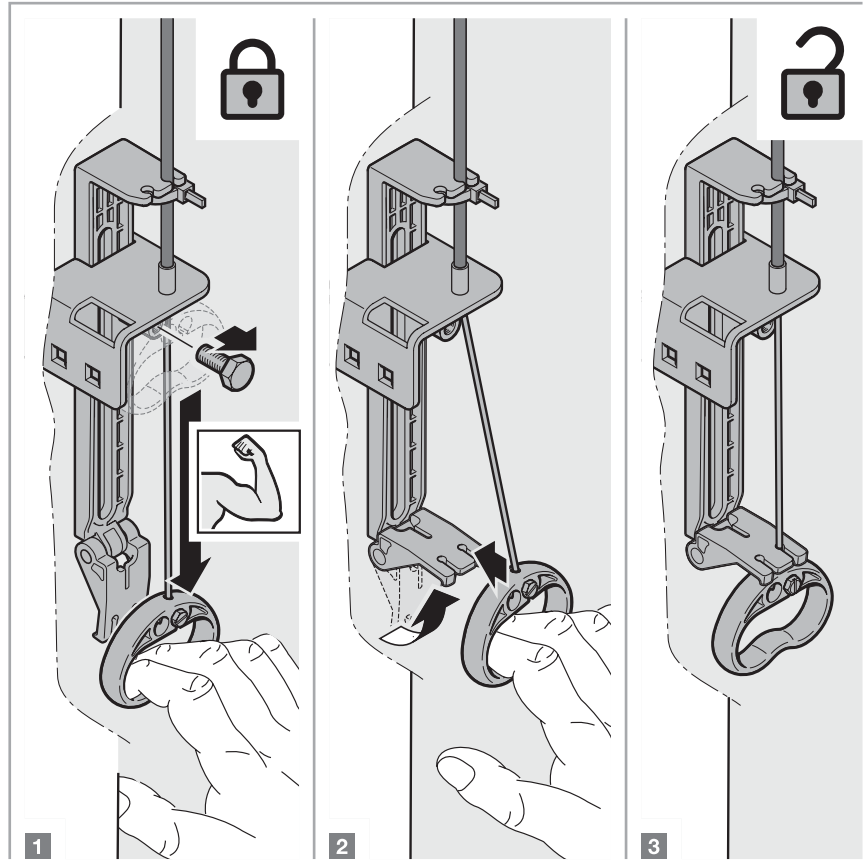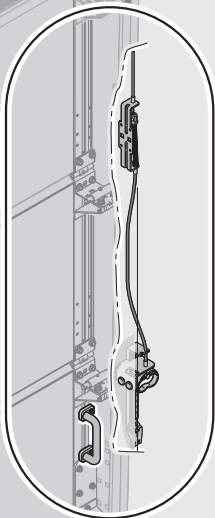

8.2

